


## INSTALLATION IN 2 EASY STEPS

Flexline vanity cabinets are ready to install right out of the box. It's so simple that just about anyone can do it.

### STEP 1


Attach the level cabinet to the wall using 3" screws through mounting rails.

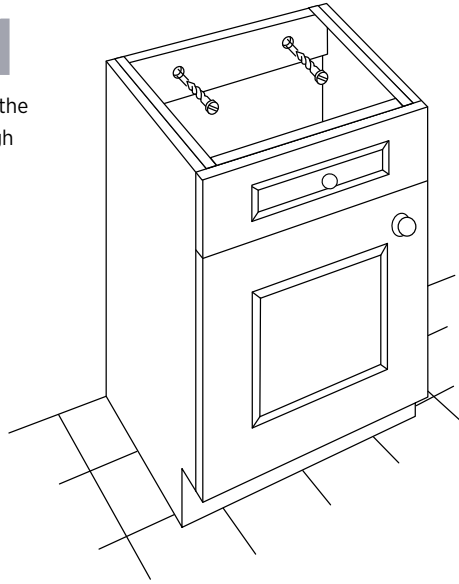

### STEP 2

Ensure that the vanity top lines up and fits securely, then **glue top to the wall-hung unit ONLY**.

**DO NOT  
GLUE TOP TO  
REMOVABLE  
BASE!**

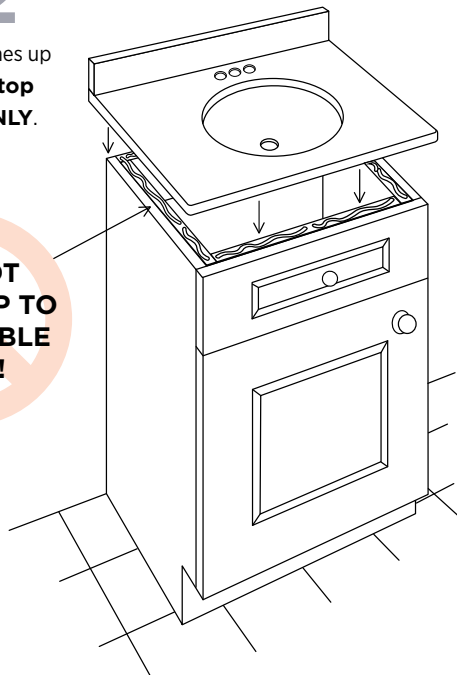

#### CONVERSION IS A SNAP

Just remove two screws, slide off the removable base cabinet, and store until it is needed again. No drilling, cutting, gluing or marring of any surfaces.